



SEE NOTE

- * 21 4KCS
- 14 A11
- R A10
- 15 A9
- A 02
- S A8
- W A0
- 16 A7
- 22 +5V
- 20 GND

NOTE:
 1. IN CHIP SELECT AREA (B9-B10) ON MAIN BOARD, "R" MUST BE PERMANENTLY JUMPED TO "C" FOR OPERATION OF THE CASSETTE INTERFACE.